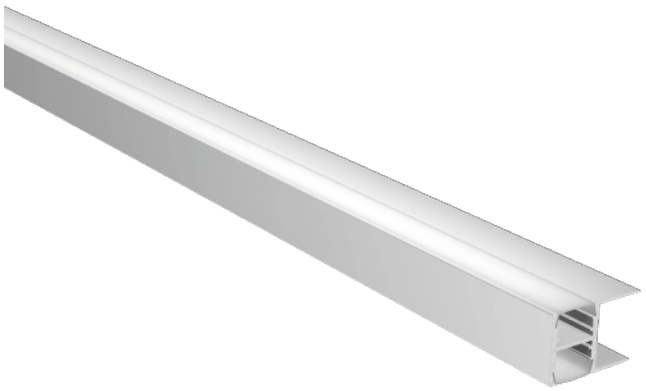

RLL 183-M3020

Dimension

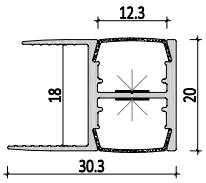

Installation steps

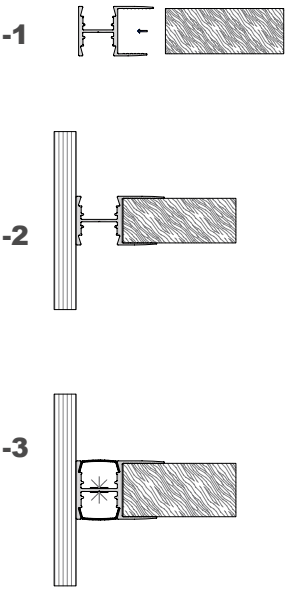

Accessories



RLL 560-Y1909

Dimension



Installation steps

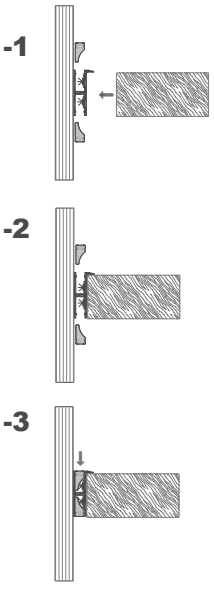

Accessories