




**RLL 562-Y1509**

## Dimension




## Installation steps

-1

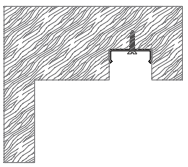

-2

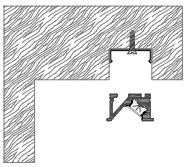

-3

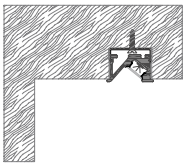

## Accessories

